




DEERC

**Instructions For Use
Gebrauchsanweisungen
Instruction d'utilisation
Istruzioni per l'uso
Instrucciones de Uso**

V 1.0

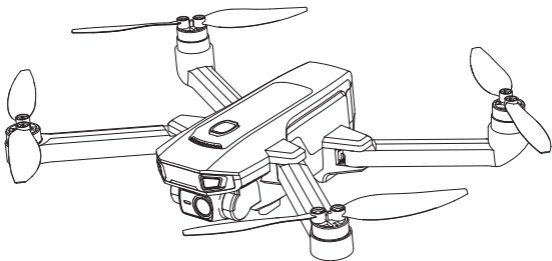

D35 pro



usa@deerc.com (USA)

eu@deerc.com (EU)



+1(334)336-0888

English	01-37
Deutsch	38-72
Français	73-107
Italiano	108-142
Español	143-177

Contents

Disclaimer & Warning	1
Safety Guidelines	1
Maintenance	5
Package Contents	6
Diagram Of Drone	7
Diagram Of Transmitter.....	8
Joystick Mode	10
Preparation Before Flight	
Charging Transmitter Batteries.....	11
Charging Drone Battery.....	11
Propellers	12
Drone Battery	12
TF Card.....	13
Flight	
Pairing	14
Compass Calibration	15
CPS Signal Search	16
Gyro Calibration	17
Unlocking the Motors	17
Takeoff/Landing	18
Functions Details	
Take Photo/Record Video	19
Speed Switch	19
Adjustment of the Camera Angles	20
Turning On/Off the GPS Mode	20
Emergency Stop	21
Orbit Flight.....	22
Follow Me.....	23
Headless Mode.....	24
Return To Home.....	26
Photo/Video Sharing.....	28
Specification	29
Contact Us	30
General Information	31

DISCLAIMER & WARNING

1. Please read this Disclaimer & Warning and Safety Guidelines carefully before using our product. By using this product, you hereby agree to this disclaimer and signify that you have read it fully. You agree that you are responsible for your own conduct and any damage caused while using this product, and any consequence. You agree to only use this product for its designed purposes and in accordance with the local laws, regulations and all applicable policies and guidelines that Deerc may provide.

2. When using this product, please be sure to strictly abide by the specification requirements and safety guidelines stated in this document. Any personal injury, property damage, legal disputes and all other adverse events caused by the violation of any of the safety instructions or due to any other factor, WILL NOT be Deerc's responsibility.

SAFETY GUIDELINES

Check Before Use

① This product is a high precision drone that integrates various electronic stability and control mechanisms. Please be sure to configure this drone carefully and correctly to ensure safe, accident-free operation.

② Ensure that the batteries of the drone and transmitter are clean, undamaged and fully charged before every use.

③ Ensure that all the propellers are undamaged and are installed in the correct orientation.

SAFETY GUIDELINES

④ Please perform a thorough check of the product before each use. Inspect the integrity of the parts, any signs of cracks and wear off on the propellers, battery power and effectiveness of the indicator, etc. If there is any problem found after checking the drone, please refrain from using it until the problem is resolved.

Flight Environment



+



+



Fly in Open Areas

Keep in Sight

**Fly Below
328 ft (100 m)**



Avoid flying over, or near obstacles, crowds, high voltage power lines, trees, airports or bodies of water.

DO NOT fly near strong electromagnetic sources such as power lines and base stations as it may affect the onboard compass.

DO NOT use this drone at night.



DO NOT use this drone in adverse weather conditions such as rain, snow, fog, and wind.

SAFETY GUIDELINES

Operation Requirements

- ① DO NOT use this product to follow any moving vehicles.
- ② During the flight, turn off the motors only in case of an emergency.
- ③ When the battery runs low, return the drone back to your starting point.
- ④ DO NOT use this product if you feel tired, take medicine or feel unwell and drink alcohol.
- ⑤ Be aware of the volume of noise that the drone produces. Please ensure to keep your distance to avoid ear damage.
- ⑥ To ensure safety and airworthiness, refrain from attaching any unauthorized items or devices to the aircraft.



- ⑦ **Stay away from the rotating propellers and motors.**


- ⑧ **DO NOT fly in any spaces where drones are prohibited. Please respect people's right to privacy by not flying your drone close to others.**

Use of Battery

- ① Please ensure batteries are fitted in the correct orientation as shown in the instruction manual.
- ② Avoid short circuits by fitting the batteries correctly, and do not crush or squeeze the batteries as this could cause the risk of a fire or explosion.
- ③ DO NOT mix new and old batteries as this can lead to poor performance of the product.
- ④ Please dispose of used batteries carefully, do not litter and recycle where ever possible.
- ⑤ DO NOT expose dead batteries to heat or fire or they may explode.
- ⑥ If the device is not going to be used for an extended period of time, please remove batteries to prevent potential damage to the drone from battery leakage.

SAFETY GUIDELINES

- ⑦ Only use the USB charging cable that comes with the drone to charge the battery.
- ⑧ DO NOT connect the battery directly to wall outlets or car cigarette-lighter sockets as this will damage your battery since they have different voltages.
- ⑨ DO NOT attempt to disassemble or modify the battery in any way
- ⑩ DO NOT use the battery if it gives off an odor, generates heat, becomes discolored, deformed or appears abnormal in any way. If any of these situations occur while the battery is in use or being charged, remove it from the device or charger immediately and discontinue use.
- ⑪ DO NOT pierce the battery casing with a nail or any other sharp object, break it open with a hammer, or step on it! Dispose or recycle this battery as it may cause personal injury or damage to your drone.
- ⑫ Always charge the batteries on a fireproof surface and away from combustible materials. DO NOT charge on surfaces that can catch fire, which includes: wood, cloth, carpet.
- ⑬ DO NOT immerse the battery in water or get it wet.
- ⑭ DO NOT solder battery terminal in any way.
- ⑮ Keep batteries out of reach of children or pets.
- ⑯ DO NOT short-circuit the battery by connecting wires or any other metal object to the positive(+) and negative(-) terminals.
- ⑰ It is imperative to use only the batteries and charging devices sold or authorized by our company. Employing unauthorized batteries or charging apparatuses may result in serious hazards such as fire, explosion, leakage, among others. We will not be held accountable for any repercussions arising from the utilization of third-party batteries or charging devices.



MAINTENANCE

- ① Clean the drone after each use with a clean, soft cloth.
- ② Avoid prolonged exposure to direct sunlight and avoid buildup of heat on the drone or batteries.
- ③ This device is not waterproof and must not be submerged or subjected to water under any circumstance. Failure to keep the device completely dry will result in failure and permanent damage to the unit. Be aware that although it might be dry where you are, droplets of rain or mist from a river or waterfall could damage your drone where it is flying.
- ④ Frequently check the charging plug and other accessories for signs of damage. If any part of the device or cables are damaged, avoid use or charging until the damaged parts are replaced.
- ⑤ Post-Flight
 - Observe the drone for any damage from a potential collision or crash.
 - Check to be sure all moving parts including the propellers are secure.
 - Check the battery for signs of overheating, warping or swelling. If you notice any abnormality in the battery such as decoloring, remove it immediately from the drone.
 - Check the levels and efficiency of the power of the battery.
 - Clean all lights and be sure they are all functioning properly for the next flight.

PACKAGE CONTENTS









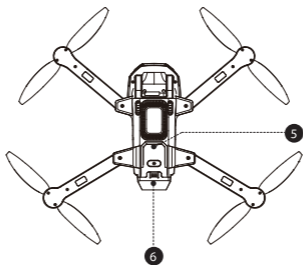
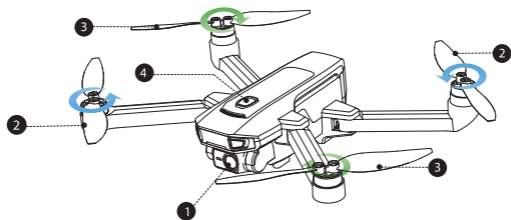
		
Drone	Transmitter	Drone Battery
		
Propellers	USB Charging Cable	Screwdriver
		
Instructions For Use	TF Card(8G)	

DIAGRAM OF DRONE



1 Camera

3 Propeller A

5 TF Card Slot

2 Propeller B

4 Power Switch

6 Drone Battery



Power on/off: Long press the power button to turn on the drone. Long press again to turn it off.

DIAGRAM OF TRANSMITTER



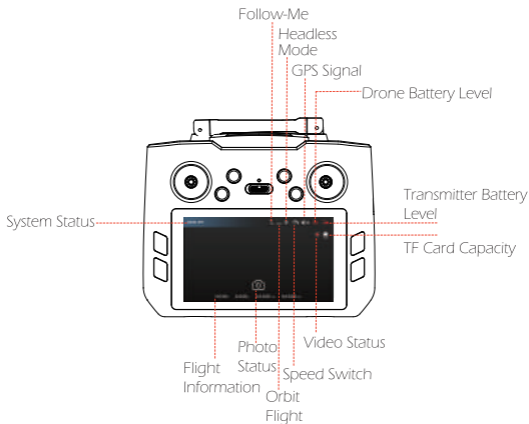


DIAGRAM OF TRANSMITTER



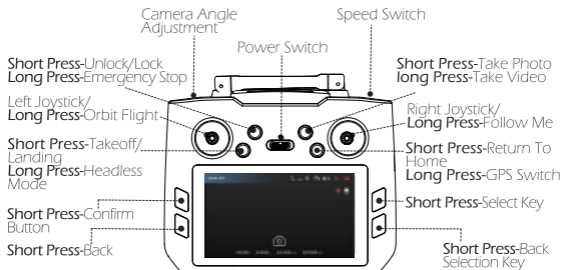

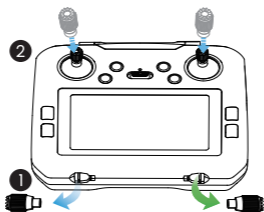

Take the joysticks out of the storage slot and mount them onto the transmitter.






• View Photos and Videos

Ensure the drone is powered on (with the TF card properly inserted into the fuselage).

Short-press the [OK] button to enter the display interface control of the upper remote.


View photos: Select the “” icon, press OK to view photos, press “” to view the previous photo, press “” to view the next photo, press the “” button to return to the previous level.

View video: Select the “” icon, press OK to view the video, press “” to view the previous segment, press “” to view the next segment, and press the “” button to return to the previous level.


Format: Select the “” icon, press OK, then select Yes to confirm formatting, select No to cancel formatting, Press the “” button to return to the previous level.

JOYSTICK MODE

Left Joystick

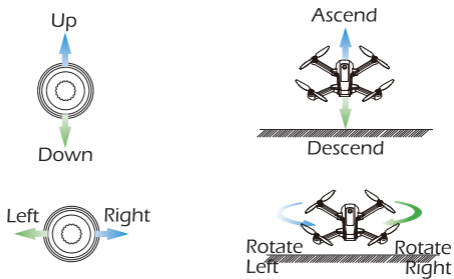

Right Joystick

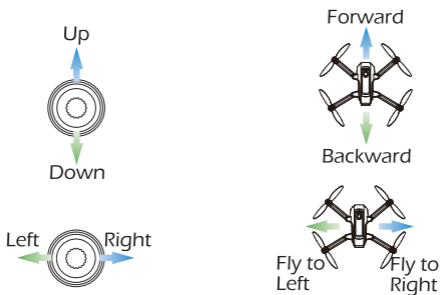


PREPARATION BEFORE FLIGHT

Charging Transmitter Battery

- 1) Connect the transmitter charging port with the USB charging cable.
- 2) Plug the USB charging cable into a USB charging port on the power bank or USB adapter (5V/2A).
- 3) When the battery is charging, the indicator light on the transmitter is red.

When the battery is fully charged, the Indicator light on the transmitter goes out .

- 4) The charging time is about 90 minutes.

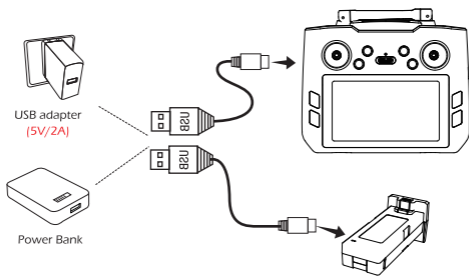

Charging Drone Battery



- 1) Connect the battery with the USB charging cable.
- 2) Plug the USB charging cable into a USB charging port on the power bank or USB adapter (5V/2A).
- 3) When the battery is charging, the indicator light on the battery is red.

When the battery is fully charged, the indicator light on the battery is green.

- 4) The charging time is about 180 minutes.

PREPARATION BEFORE FLIGHT



Propellers

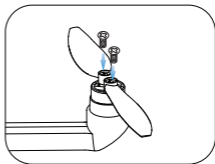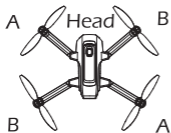

Installation:


- ① An "A" or "B" is printed on the propeller.
- ② Lock the propellers to the corresponding the arms of drone (the motor shafts are also marked) with screws.
- ③ Rotate each screws clockwise.

Drone Battery

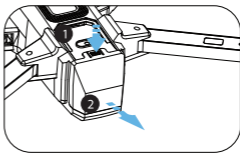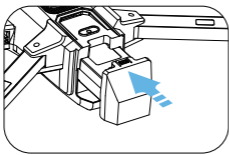


Installation: Push the battery into the battery compartment at the rear of the drone. Make sure that you hear a click sound, which indicates that the battery is firmly installed.

Remove: Press the lock button on the battery and pull it back to remove the battery from the battery compartment.

 The battery should be installed firmly. Otherwise, the flight safety of your drone may be affected. The drone may crash due to a power-cut during the flight.

PREPARATION BEFORE FLIGHT

TF Card

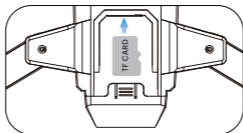



To store your photos and videos, insert the TF card into the slot as shown above before turning on the drone. The drone supports TF card up to 64GB.


 The drone is equipped with an 8G TF card in the factory fuselage.

FLIGHT


Pairing

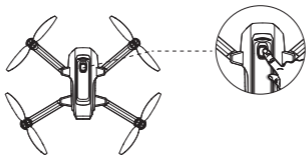


- ① Long press the power “” button on the drone. The drone status LED begins to flash, which means the drone is powered on.

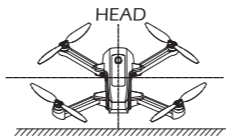

- ② Make sure the head of the drone is pointing forward, and it is placed on a level surface.

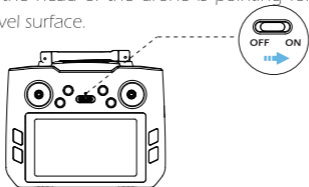


- ③ After both the drone and the transmitter are turned on, the transmitter will long beep once, indicating that the pairing is done.

 **The display takes 20-30 seconds to show the image.**
The GPS follow icon needs 1-2 minutes to turn from red to white before the GPS follow function becomes available. Please wait patiently.

FLIGHT

Compass Calibration

 The drone will perform a mandatory compass calibration before the initial flight. So you can skip step 1 if this is the first time you fly your drone.



STEP 1: Push both the right and left joysticks simultaneously to the bottom left corner. The transmitter beeps once. You can proceed to step 2.



STEP 2: Keep the drone parallel to the floor, and spin it three times. Once the transmitter beeps once. You can proceed to step 3.




STEP 3: Point the head of the drone upward, and spin the drone three times. Once the transmitter long beeps which means that you have successfully performed a compass calibration.

FLIGHT

GPS Signal Search

Please don't use the GPS mode when you are indoors.




After calibrating the compass, put the drone on a flat surface. Make sure there are no external sources of signal interference around.

The drone will automatically perform a search for GPS signals. The search will last for about 1 minute.

The drone status LED will turn solid, indicating that the search is finished.



- When in GPS mode, the drone must first search for GPS signals before it can take off.
- If the GPS signal is weak, or if you intend to fly this drone indoors, long press the GPS Switch() to exit GPS mode. The drone is ready for unlocking and takeoff when the drone front light turns green and the back light flashes red slowly. However, please note that all GPS-related functions will be unavailable in this mode.

FLIGHT

Gyro Calibration





Push the two joysticks to the bottom right corner. The drone indicators will go from flashing to solid, which means that the gyro calibration is done.




To ensure flight safety, we recommend that the pilot performs a gyro calibration after every pairing or crash of the drone.

Unlocking the Motors

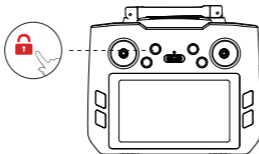

Short press the "  " button on the transmitter. The transmitter beeps once, and the motors begin to rotate. The drone is unlocked.






Short press the "  " button again, and the motors stop immediately. The drone is locked.

FLIGHT

Takeoff/Landing

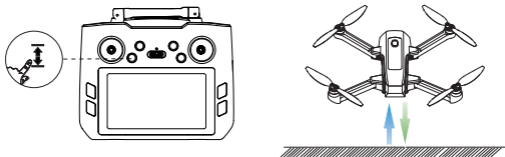
⚠ Please turn on the GPS mode before the flight to prevent the drone from flying away and getting lost!



- ① **Takeoff:** After unlocking the motors, short press the "  " button. The drone will ascend to an altitude of 5 ft. You can now use the two joysticks to control the drone's movements in the air.
- ② **Landing:** During the flight, press the "  " button again. The drone slowly descends to the ground.

FUNCTIONS DETAILS


Take Photo/Record Video

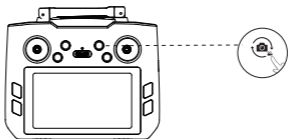

Short press the "📷" button on the transmitter. The transmitter beeps once. The camera has taken a photo.

Long press the "📷" button. The transmitter beeps twice, which means that the camera is recording. Long press the button again will stop video recording.

Speed Switch

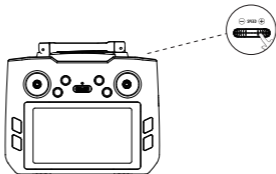


This drone comes with two speed levels (high/low).

You can adjust the speed by using the scroll in the upper right corner of the transmitter. The transmitter will beep once to indicate low speed, twice to indicate high speed. The low speed is 10ft/s. The high speed is 23ft/s.

FUNCTIONS DETAILS


Adjustment of the Camera Angles

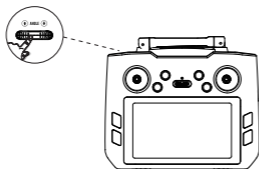


You can adjust the angle of the camera with the roller on the top left corner of the transmitter.

Please scroll left and the camera tilts up. Scroll right to tilt the camera down. (Tilt range is -90° to 0°)

Turning On/Off the GPS Mode

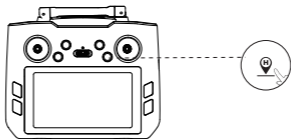


The drone will be in GPS mode by default every time you power on the transmitter. To turn off the GPS mode, long press the "  " button on the transmitter.

FUNCTIONS DETAILS

Emergency Stop

Long press the "🔒" button for about 3 seconds. All the motors stop spinning immediately, and the drone falls to the ground.

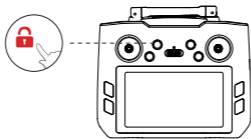


⚠️ When the Emergency Stop is triggered, the propellers will immediately stop spinning, and the drone will lose control, falling freely from its current height. This could potentially hit people or anything in surrounding, leading to injury or damage to valuable items.

The Emergency Stop should only be triggered in emergency situations to minimize risk and reduce damage. Emergency situations include, but are not limited to: the drone losing control and colliding with people or animals or items, hair or other objects becoming entangled in the propellers, or the drone posing a threat to the safety of other aircraft, where immediate flight cessation or an immediate stop of the propellers is required.

FUNCTIONS DETAILS

Orbit Flight

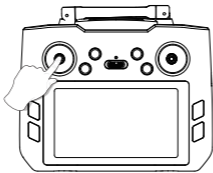


1. Press the left joystick to initiate orbital flight.
2. The drone will record its current position when this function is activated as the circle's center. It then flies away from it to the set radius distance and begins to circle clockwise. (Default radius: 15 ft)
3. Press the left joystick again to turn off Orbit Flight.

FUNCTIONS DETAILS

Follow Me

When the Follow Me function is enabled, the drone will track your movement by following the GPS signal on your mobile phone. (Before using this function, please make sure that the connection between the drone and the transmitter is strong and stable.)

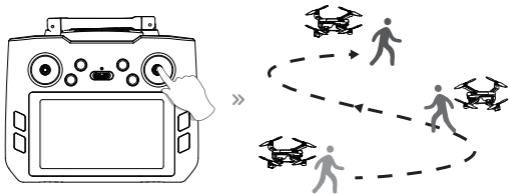

1. Ensure the drone's flight range is within 16~98 ft.
2. Press the right joystick to initiate follow me.
3. To exit Follow Me mode, simply press the right joystick again.




- The Follow me function can only be used if the flight range is within 16~98 ft.
- The Follow me function may be difficult to activate if the mobile phone's GPS signal is too weak. This could be caused by signal interference from surrounding buildings, trees, mobile network congestion, etc.
- Please use Follow Me function in an open area and be mindful of your surroundings. The drone is NOT equipped with obstacle avoidance.
- The follow speed is 5m/s.


FUNCTIONS DETAILS


Headless Mode


The Headless Mode is a great training tool for beginner pilots. It is also useful when the drone is too far from the pilot (which makes it difficult to tell its orientation). It keeps the drone traveling forward, backward, left, or right when you move the right joystick in those directions, regardless of which way the front of the drone is pointed.

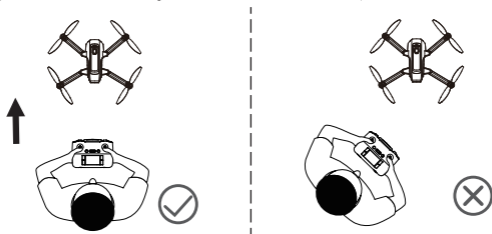

The pilot should stay facing the same direction that the drone's head points to when it takes off.

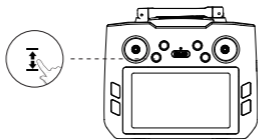

Entering: Long press the () on the transmitter. It then beeps 1 time, The drone Indicator keeps flashing, indicating that the drone is in Headless Mode.

Exiting: Long press the () on the transmitter again. It then beeps 1 time, indicating that the drone has exited the Headless Mode.

FUNCTIONS DETAILS

* Why is the orientation of the drone important?

In normal flying mode, the control of the drone movement can sometimes be counter-intuitive for beginners. For instance, when the drone is in the air with its head pointing to your right, if you push the right joystick forward, the drone will fly to your right, instead of flying forward.

With the headless mode, the drone has a fixed "head." In Headless Mode, the drone always remembers the side its head points to during takeoff as the front side. This means that if the drone takes off with its head pointing forward, it doesn't matter how the drone is oriented in the air, when you push the right joystick forward, the drone will fly forward. Or, when its head is pointing to you, if you push the right joystick to the left, the drone will fly to your left.

RETURN TO HOME

This function can only be activated when the drone is in GPS mode.

The RTH (Return to Home) function can bring the drone back to the last recorded Home Point. There are three kinds of RTH: Smart RTH, Failsafe RTH, and Low Voltage RTH.

Home Point: The drone will mark the first location where it receives a strong GPS signal (*satellite connections* ≥ 7) during the flight or takeoff as the Home Point.

Smart RTH

When the GPS signal is strong (*satellite connections* ≥ 7), press the "📍" button. The transmitter will beep once, indicating that the Smart RTH is activated. The drone will start flying back to the Home Point automatically.

During the RTH procedure, if the pilot presses the "📍" button again, the drone will exit the RTH procedure immediately.

Failsafe RTH

The Failsafe RTH will be activated when:

1. The drone receives a strong GPS signal (*satellite connections* ≥ 7); and
2. There is a pre-recorded Home Point; and
3. The connection between the transmitter and the drone is lost for more than 6 seconds.

Once the Failsafe RTH is activated, the drone will start to fly back to the pre-recorded Home Point automatically.

If the connection between the drone and the transmitter is re-established during the Failsafe RTH procedure, the drone will stop flying back to the Home Point, and the pilot will regain control of the drone.

RETURN TO HOME

Low Voltage RTH

When the flight battery is too low or there is not enough power to return home, the user should land the drone as soon as possible to avoid damage to the drone or other hazards. To prevent unnecessary risks due to insufficient battery power, the low voltage RTH function will be automatically triggered when the drone battery is low. According to the remaining power, there are two scenarios:

The First Stage of Low Voltage RTH: The drone will return to a position 98 ft above the Home Point. While the drone is returning, the drone status LED starts to flash red and the transmitter keeps beeping. After the drone returns, you will be restricted to flying it within a 'safety zone,' which is centered around the Home Point and has a radius of 98 ft and a height of 98 ft. The drone will not be able to exit this zone.

* Please note, if the drone is already flying within the safety zone before the battery level drops to the threshold for activating Low Voltage RTH, then the First Stage of Low Voltage RTH will not be executed.

The Second Stage of Low Voltage RTH: The drone will automatically return to the Home Point. While the drone status LED starts to flash red quickly, and the transmitter keeps beeping.




- During RTH, the drone cannot avoid obstacles.

- If the GPS signal is weak or unavailable, the RTH cannot be activated.

PHOTO/VIDEO SHARING

Photo/Video Sharing

 Download the mobile app (solely for quickly sharing photos and videos). Please turn off the display, as connecting the app to the drone will prevent the display from connecting. Only one of the two methods can be used at a time.

App Download and Installation :



Connecting to Drone's Wi-Fi



Connect your phone to the Wi-Fi network generated by the drone.

① Make sure to turn off Bluetooth, Mobile Data, and VPN. Enter your phone's Wi-Fi settings and click Wi-Fi to search for the Wi-Fi of the drone. (Make sure the pairing has finished before going to the Wi-Fi settings on your phone)


② Select the Wi-Fi network: **Deerc GPS DP-*******.

③ Wait for a couple of seconds for your phone to connect to the drone's Wi-Fi.

④ Open the **DE GPS** app.

> The connection between your phone and the drone is established automatically.

> You can read the captured images and videos and share them socially in the app's media library.

 Because the Wi-Fi network created by the drone cannot access the Internet, your phone may inform you in various ways, like saying the connection isn't secure, or there is no internet connection, etc. Please ignore these messages. Or, in the case of getting Pop-ups, choose the option that allows you to stay with the current Wi-Fi.

SPECIFICATIONS

DRONE

Model: D35 Pro

Weight: 210g/7,4oz

Max Flight Time: 20 minutes (in a windless environment)

Max Flight Speed: 7ft/s

Max Flight Height: 328 ft/100m

Max Wind Speed Resistance: 5,5ft/s

Operating Temperature Range: 32° to 104°F

Size: 300× 246 × 53 mm (Unfolded)

145× 99 × 53 mm (Folded)

DRONE BATTERY

Model: DS902895

Capacity: 2200 mAh

Voltage: 3,7 V

Max Charging Voltage: 4,37V

Battery Type: Lithium-ion Polymer Battery

Energy: 8.14 Wh

Charging Temperature Range: 41° to 104°F

Charging Time: about 180 minutes

TRANSMITTER

Operating Frequency: 2452-2474 MHz

Max Flight Distance: 984 ft/300 m (outdoor and unobstructed)

Battery Type: 3.7V 1200 mAh

Charging Time: about 90 minutes

Operating Temperature Range: 32° to 104°F

SPECIFICATIONS

CAMERA

Operating Frequency: 2452-2474MHz

Photo Resolution: 3840 * 2160P (in TF card)

4096 * 3072P (in mobile phone)

Video Resolution: 2048 * 1088P @ 30fps (in TF card)

2048 * 1152P @ 20fps (in mobile phone)

Lens: FOV 117°

Max Transmission Distance: 656 ft/200 m

(outdoor and unobstructed)

Photo Formats: JPEG

Video Formats: MP4

Supported TF Cards: Supports a TF Card (Class 10 above) with
capacity of up to 64 GB (Not included)

File Systems: FAT32

USB CHARGING CABLE

Input: 5V/2A

Rated Power: ≤ 10W

CONTACT US

Please do not hesitate to contact us if you need further support.

✉ usa@deerc.com (USA)

eu@deerc.com (EU)

☎ +1(334)336-0888

GENERAL INFORMATION

FCC Notice:

This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

The Supplier's Declaration of Conformity is available at the following address:

https://www.deerc.com/Download/US/D35_Pro_FCC_sDoC.pdf

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

GENERAL INFORMATION

WARNING: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

RF Exposure

The equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This device should be installed and operated with minimum distance 20cm between the radiator & your body.

IC Statement:

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

- (1) This device may not cause interference.
- (2) This device must accept any interference, including interference that may cause undesired operation of the device.

L'émetteur/récepteur exempt de licence contenu dans le présent appareil est conforme aux CNR d'Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :

- (1) L'appareil ne doit pas produire de brouillage;
- (2) L'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

GENERAL INFORMATION

CAN NMB-003 (B)

RF Exposure

Radiation Exposure Statement:

This equipment complies with IC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20cm between the radiator & your body.

Déclaration d'exposition aux radiations:

Cet équipement est conforme aux limites d'exposition aux rayonnements IC établies pour un environnement non contrôlé. Cet équipement doit être installé et utilisé avec un minimum de 20 cm de distance entre la source de rayonnement et votre corps.

HOW TO RECYCLE THIS PRODUCT

This symbol on the product or its documentation indicates that it **MUST** not be disposed of together with household waste.

Uncontrolled waste disposal may harm the environment or human health.

Please separate your device from other types of waste for recycling it responsibly.

This will help to foster the sustainable re-use of material resources.

We suggest you contact your retailer, inquire at your local town hall or business store to find out where and how the drone can be recycled.




GENERAL INFORMATION

BATTERY WARNING:

1. Failure to follow all the instructions may result in serious injury, irreparable damage to the battery may cause a fire, smoke or explosion as well.
2. Always check the battery's condition before charging or using it.
3. Please replace the battery if the battery is dropped or has any peculiar smell, overheating, discolouration, deformation or leakage happens.
4. Never use anything other than the approved LiPo charger to charge the battery. Always use a balancing charger for LiPo cells or a LiPo cell balancer. It is recommended that you use the one provided with the product.
5. The battery temperature must never exceed 60°C(140°F) otherwise the battery could be damaged or ignited.
6. Never charge the battery on a flammable surface, near flammable products or inside a vehicle(preferably place the battery on a non-flammable and non-conductive surface).
7. Never leave the battery unattended during the charging process. Never disassemble or modify the housing's wiring, or puncture the cells. Always ensure that the charger output voltage corresponds to the voltage of the battery. DO NOT short circuit the batteries.
8. Never expose the Li-Po battery to moisture or direct sunlight, or store it in a place where temperatures could exceed 60°C(car in the sun, for example).
9. Always keep it out of reach of children.
10. Improper battery use may result in a fire, explosion or other hazards.

GENERAL INFORMATION

11. Non-rechargeable batteries are not allowed to be recharged. Rechargeable batteries should be charged under adults' supervision.
12. DO NOT mix different types of batteries including the new and used ones.
13. Batteries MUST be inserted with the correct polarity.
14. The supply terminals MUST not to be short-circuited. Regular examination of transformer or battery charger for any damage to their cords, plugs, enclosures and other parts MUST be done. If there is damage, they MUST not be used until the damage has been repaired.
15. The packaging has to be kept since it contains important information.
16. This toy is only can be connected to the equipment with symbol Class II. 

EU RF Power(EIRP): <10 dBm (2452-2474 MHz)

Caution

- 1.The max operating of the EUT is 40°C, and shouldn't be lower than 0°C.
- 2.The device complies with RF specifications when the device used at 0mm form your body.
- 3.Declaration of Conformity.

GENERAL INFORMATION

We, Xiamen Huoshiquan Import & Export CO.,LTD hereby, declare that the UAS D35 Pro is of class C0, and in compliance with the RED Directive 2014/53/EU, the RoHS Directive 2011/65/EU, Toy Directive 2009/48/EC and UAS Delegated Regulation 2019/945/EU amended by Delegated Regulation 2020/1058/EU. The full EU declaration of conformity is accessible at the following website:

http://www.deerc.com/Download/CE/D35 Pro_EU_DOC.pdf

This product can be used among EU member states.

MANUFACTURER INFORMATION

Manufactured by

Xiamen Huoshiquan Import & Export CO.,LTD.

Unit 1, Room 501, Hongxiang Building, No.258 Hubin Nan Road,
Siming District, Xiamen, China

+1(334)336-0888

MTOM Statement

D35 Pro is a quadrotor drone. The MTOM of D35 Pro is 210g, including the propellers, the Flight Battery and TF card, which is compliant with C0 requirements.

Users must follow the instructions below to comply with the MTOM C0 requirements. Otherwise, the drone cannot be used as a C0 aircraft:

1. DO NOT add any payload to the aircraft except the items listed in the List of Items including qualified accessories section.
2. DO NOT use any non-qualified replacement parts, such as flight batteries or propellers, etc.
3. DO NOT retrofit the aircraft.

GENERAL INFORMATION

List of Items including qualified accessories

- 1.D35 Pro Propellers (Model: D35 Pro-FY, 1.1 g each propeller,7980RPM)
2. D35 Pro Flight Battery (approx. 56 g)
3. Carte TF (environ 0,3 g)

List of Spare and Replacement Parts

1. D35 Pro Propellers (1.1g each propeller)
2. D35 Pro Flight Battery (approx. 56 g)

List of Safe Guards

Below is the list of the safeguards and operation safeguards for D35 Pro.

1. Emergency Stop function can be performed to stop the motors in case of an emergency. Refer to the Emergency Stop section for details.
2. Prevent the drone from flying in restricted airspace. Refer to the Flight Environment Requirements section for details.
3. The Return to Home (RTH) function. Refer to the GPS Return to Home section for details.

Similar products produced by the same manufacturer are electrically identical. Distinguish them based on product model and appearance color.

The firmware of toy product cannot be upgraded.



MADE IN CHINA(CN)